Parts Manual for



INDEX - GROUP	(SECTION)	PAGE(S)
HANDLES, CONTROLS ADAPTERS	(ONE)	1.1 - 1.3
DECALS SIDE CHUTES	(ONE) (TWO)	1.3 2.1
CUTTING DECK, BLADES DRIVE SYSTEM - SELF PROPELLED	(THREE) (FOUR)	3.1 - 3.2 4.1 - 4.4
WHEELS, BRACKETS, LATCHES ACCESSORIES	(FIVE) (SIX)	5.1 - 5.3 6.1 - 6.3
GRASS CATCHERS ENGINE SPECIFICATIONS	(SIX) (SEVEN)	6.2 7.1
HARDWARE BAGS	(SEVEN)	7.1

SNAPPER POWER EQUIPMENT


McDonough,GA•30253



(REV. 1, 3/91) (REPLACES I.R. 10/89) **MANUAL #06142**

1	ITEM	PART NO.	DESCRIPTION	(USED ON)
	1	3-6349	HANDLE, Upper	Push
	-	3-6356	HANDLE, Upper	Self-Propelled
	2	3-6351	HANDLE, Middle	All
	3	3-8469	HANDLE, Lower Left Hand	All
	4	3-8468	HANDLE, Lower Right Hand	All
	5	1-7072	CONTROL, Blade	All
	6	3-2829	CLIP, Blade Control	All (Same either side)
	7	2-3824	CABLE, Blade Control	Briggs
	· -	2-3847	CABLE, Blade Control	Robin Engines (4-cycle Engines)
	- *-	1-7446	CABLE, Blade Control	Robin Engines (2-cycle Engines)
	8	3-2826	HANDLE, Wheel Drive	Self-propelled
	9	1-4307	GRIP, Wheel Drive Handle	Self-propelled
	10	2-3794	CABLE, Clutch Pull(Z-BEND)	Self-propelled
	11 .	1-2121	COVER, Vinyl	Self-propelled (Part of item 10)
	12	1-2122	SPRING, Clutch	Self-propelled
	13	3-8478	SECTOR, Speed	Self-propelled
	14	1-2317	LEVER, Speed Control	Self-propelled
	15	1-2093	SPRING, Speed Control	Self-propelled
	16	9-0188	WASHER, 3/8 Flat	All-different locations
	17	2-3801	GRIP, Speed Control Handle	Self-propelled
	18	3-2830	ANCHOR, Speed Control	Self-propelled
	19	3-2408	GUIDE, Lower V-Belt	Self-propelled
	20	1-5752	LINK, Transfer	Self-propelled
	21	1-0937	CLIP, Transfer Rod	Self-propelled
	22	9-1013	BOLT, 5/16-18x2 Curved Head	All ('91 Models & Later)
	23	1-2114	BUSHING, Differential	Self-propelled
	24	9-0595	BOLT, 5/16-18x3/4 Flange Lock	Self-propelled
	25	9-0238	CAPSCREW, 5/16-24x1	Self-propelled
	26	9-1026	BOLT, 5/16-18x5/8 Carriage	All (different locations)
	27	9-0585	NUT, 5/16-18 Hex Flange Lock	All (different locations)
	28	9-0222	NUT, 5/16-24 Center Lock	Self-propelled
	29	2-3813	CLIP Cable/Wiring	All ~
	30	2-3793	NUT, 5/16-18 Curved Head	All ('90 Models)
	31	9-0548	SCREW, 5/16-18x2" Hex Cap	All ('90 Models)
	32	9-1025	CAPSCREW, 1/4-28x1-3/8	Self-propelled
	33	9-1023	LOCKWASHER, 1/4 Internal Tooth	All (different locations)('90 Models)
	- y	9-1068	LOCKWASHER, Internal Tooth	All (different locations) ('91 Models & Later)
	34	9-1024	NUT, 1/4-20 Hex	All (different locations)('90 Models)
	-	9-0196	NUT, 5/16-18 Hex	All (different locations) ('91 Models & Later)
	35	9-1022	CAPSCREW, 1/4-28x1-3/4	All (throttle control)
	36	1-4343	BUSHING	All
	37	2-3792	PIN, Clutch Handle	Self-propelled
	38	9-1020	PUSH-NUT (for handle pin)	Self-propelled
	39	2-3901	GRIP, Foam	Push
	-		GRIP, Foam	Self-Propelled
	40	2-3745	DECAL, Blade Control	All (SEE PAGE 1.3)
		2-3886	DECAL, Blade Control	All (European Models)
	41		STRAP, Handle	All ('90 Models & Earlier)
	-		STRAP, Handle	All ('91 Models & Later)
	42	1-7720	BOLT, 5/16-18x1-1/2" Curved Head	All ('91 Models & Later)
	43	9-0095	NUT, 1/4-28 Hex	Self-Propelled
	44	1-5753	JOINT, Ball	Self-Propelled

SERIES 7

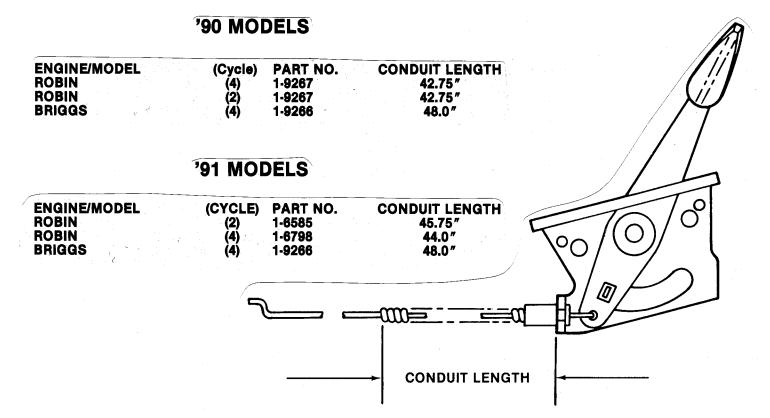









WARNING TO PREVENT INJURY STOP ENGINE BY RELEASING BLADE CONTROL OR BY MOVING ENGINE CONTROL to STOP BEFORE:

- REMOVING BAG or CLEARING GRASS. ADJUSTING or CLEANING MOWER.
- PLACING HANDS OF FEET NEAR BOTTOM OF BLADE HOUSING. FOLLOW SAFETY INSTRUCTIONS IN OPERATOR'S MANUAL!


STARTING PROCEDURE

- 1. Set ENGINE CONTROL to START OF CHOKE. 2. Hold BLADE CONTROL firmly up to HANDLE. 3. Stand CLOSE to SIDE of HANDLE. 4. Place FOOT on top of REAR WHEEL. 5. Pull STARTER ROPE.




SEE PAGE 7.1 FOR OTHER DECALS

ITEM	PART NO.	DESCRIPTION		
1	1-3010	DECAL, Danger		
2	2-3745	DECAL, Blade Control		
3	2-3870	DECAL, Warning		
4	1-9279	DECAL, SNAPPER		
•	1-7149	DECAL, SNAPPER		

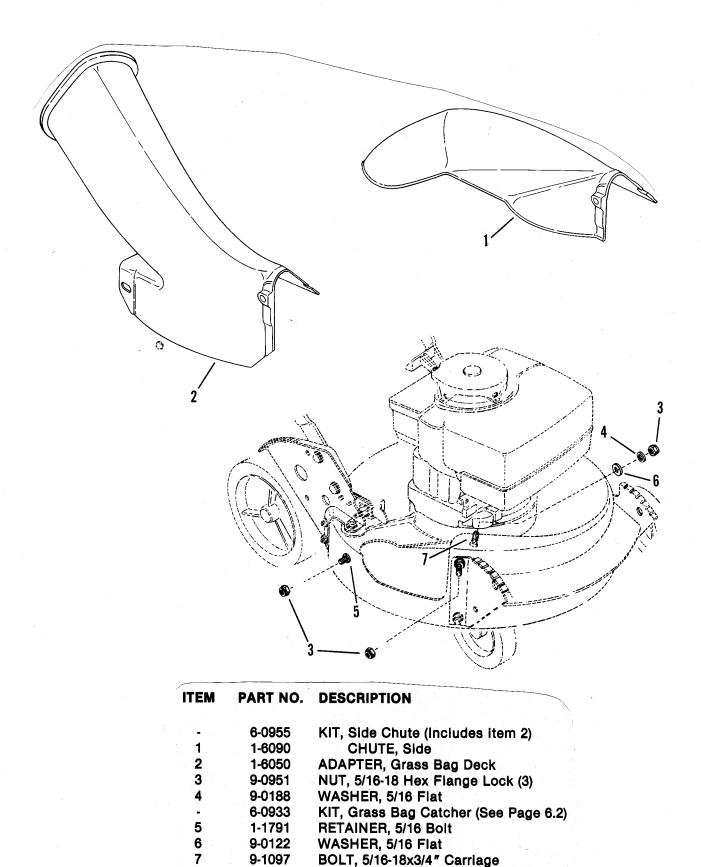


PAC-N-SAC components found in separate manual #06121.

CUTTING DECK, BLADE, INTERLOCK

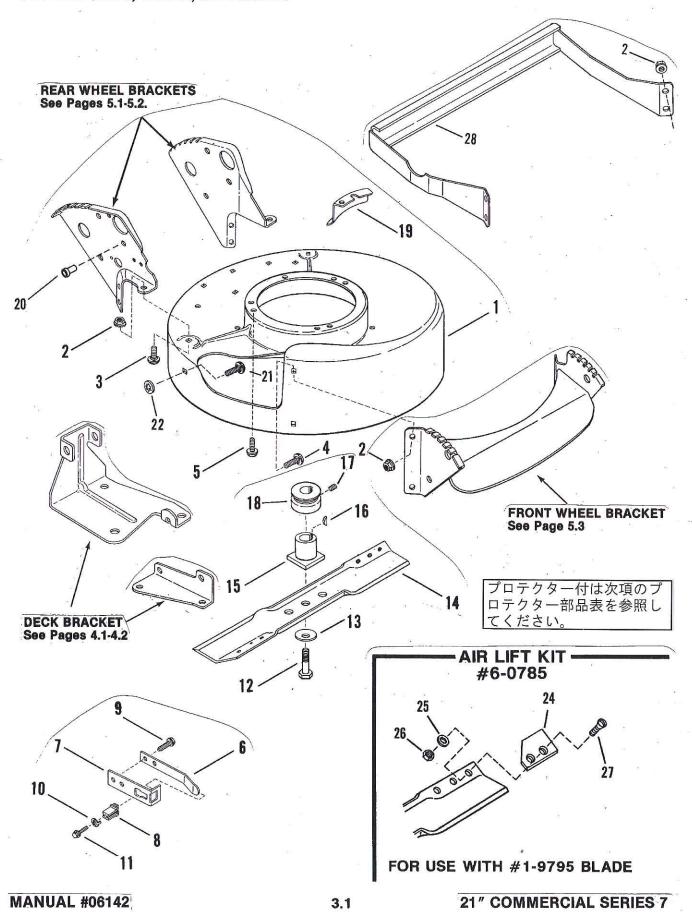


ITE	M I	PART NO.	DESCRIPTION	
1		5-7665	DECK, Mower (Includes painted deck) with decals)	
/2	10 0 1	9-0585	NUT, 5/16-18 Hex Flange Lock (12)	d
3	G 1962	9-0731	BOLT, 5/16-18x1/2" Short Neck Carriage (Gr.)(9)	
4	1/2	9-0383	BOLT, 5/16-18x1" Short Neck Carriage	
5	10.5	9-0324	SCREW, 3/8-16x1" Self-tapping (Engine Mounting)(2)	
6	i	3-2417	SPRING, Wheel Bracket Type Interlock	
7	١.	3-2416	BRACKET, Wheel Bracket Type Interlock	
8		1-2048	INSULATOR, Interlock	
. 9		9-0539	SCREW, 1/4-20x1/2" Self-tapping (2)	
10) .	9-0385	WASHER, #8Tab Internal Tooth Lock	
11	5 5	9-0379	SCREW, #8-18x3/4" Hex Head Machine	
12	2	9-0167	SCREW, 3/8-24x2" Hex Head Cap (Gr. 5)	
13	3	1-2063	WASHER, Cone	
14	ŀ	1-9795	BLADE, Cutter, 20.75" (Replaced 1-9710 & 1-9702)	
15	5 '	1-5626	HUB, Blade Drive	
16	}	1-2011	KEY, HI-Pro (2) ('90 Models) プロテクター付は次項	
		1-6381	KEY, Square (Robin) ('91 Models & Later) ロテクター部品表を参てください。	:照し
* •		1-5894	KEY, Square (Briggs) ('91 Models & Later)	
17		9-0201	SCREW, 5/16-18x5/16" Hex Socket Set	
18	E	2-1822	PULLEY, Engine (Briggs)('91 Models & Later)	(4)
s 5.€	53 (4)	1-5780	PULLEY, Engine ('91 Models & Later)	
. 19		3-1968	SHIELD, Belt Opening Cover (Push Models Only)	8
20		1-2135	BUSHING, Interlock Wire	
21		9-0799	BOLT, 5/16-18x5/8" Short Neck Carriage (4)	
22	1	1-1791	RETAINER, 5/16 Bolt	
23		1-1762	COVER, Spark Plug (NOT SHOWN)	
	17	6-0785	KIT, Air Lift (Includes items 24 thru 27)	
24		3-2558	LIFT Air (2)	- 10 - 10
25		9-0391	WASHER, 5/16 Internal Tooth Lock (4)	
26		9-0223	NUT, 5/16-24 Hex (4)	¥
. 27	2 2	9-0228	SCREW, 5/16-24x21/32" Machine (4)	
28		4-9755	STRUCTURE, Fender (European Only)	- (*)

クランクシャフトプロテクタ一部品表

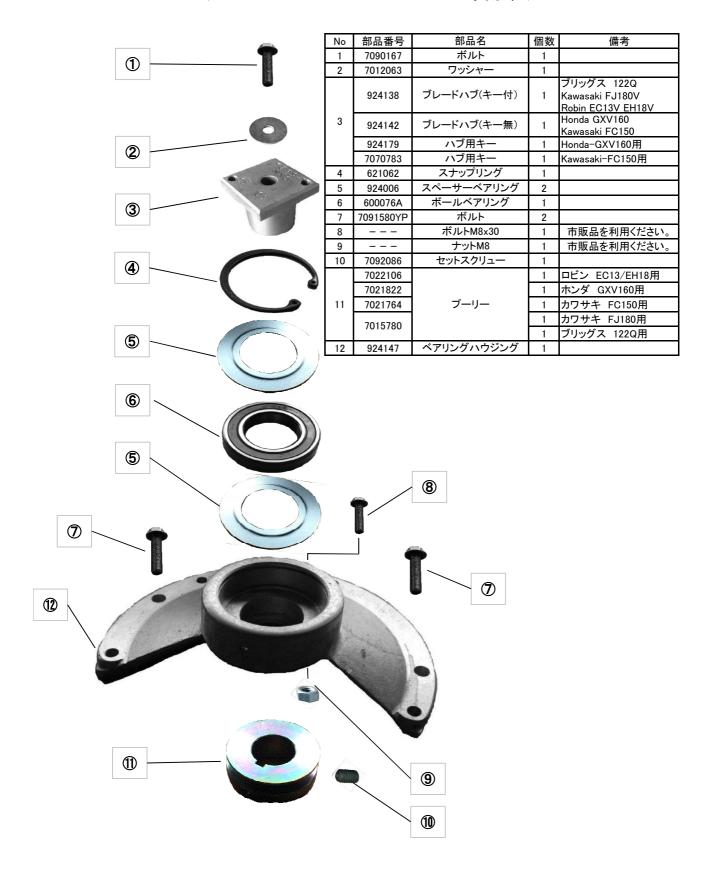


DRIVE SYSTEM - SELF-PROPELLED

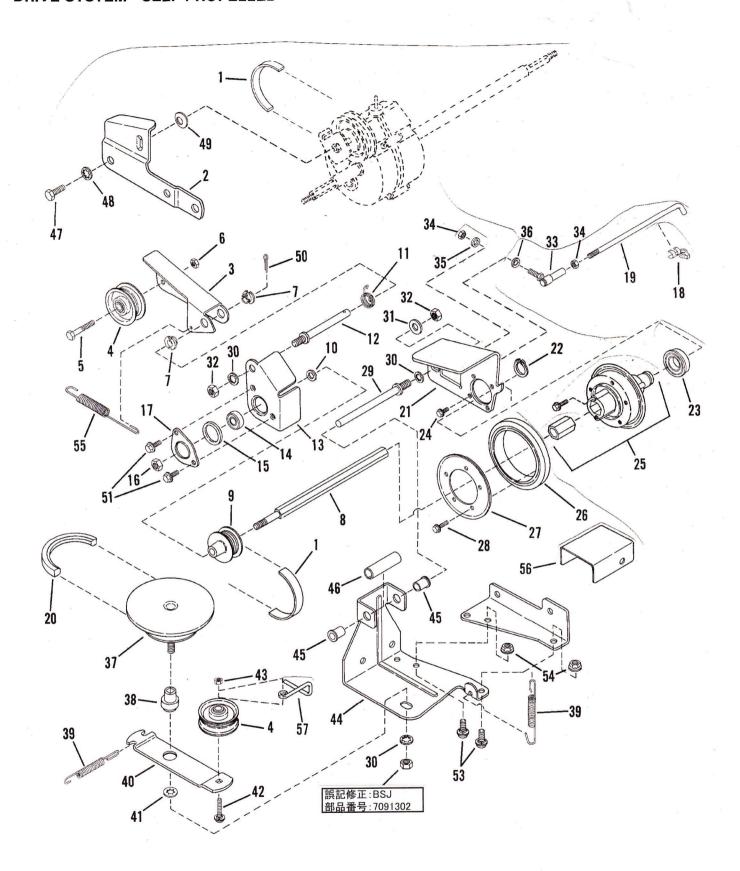

```
ITEM
          PART NO.
                        DESCRIPTION
            1-2354
                        BELT, Poly-Vee
                        LINK, Differential
            3-1880
  2
                        ASSEMBLY, Clutch Idler (Includes items 3 thru 7)
ARM, Clutch Idler
            5-1921
  3
            3-2832
  4
            1-2124
                              PULLEY, Idler
                             CAPSCREW, 1/4-28x1-3/8" Hex Head
NUT, 1/4-28 Hex Lock
BUSHING, 3/8 I.D. Nylon (2)
  5
            9-0552
  6
            9-0303
            1-2117
  7
            2-3744
  8
                        HEX-SHAFT
  9
            1-9383
                        PULLEY
 10
            1-2316
                        WASHER
                        SPRING, Torsion
 11
            1-2126
 12
            1-2111
 13
            3-1873
                        HOLDER, Bearing (Inner Half)
                        BEARING, Ball
 14
            1-2304
 15
            1-1025
                        O-RING
 16
            9-0289
                        NUT, 3/8 Hex Center Lock
                        HOLDER, Bearing (Outer Half)
 17
            3-1809
                        CLIP, 1/4 Right Arc (Transfer Rod)
LINK, Transfer
 18
            1-0937
 19
            1-5752
 20
            1-2353
                        BELT, Engine Drive
                        ASSEMBLY, Driven Disc (Includes items 21 thru 28)
PLATE, Thrust
RING, Retaining
            5-7444
 21
            3-8486
 22
            1-0746
 23
            1-5474
                              BEARING, Ball
                              SCREW, #10-32x1/4" Self-Tapping Machine (4)
ASSEMBLY, Hub (Includes 1-1108 Bushing & two 9-0913 Self-
 24
            9-0981
            5-1616
2-3364
 25
                             DRIVEN-RING
 26
                                                                                  Tapping Screws)
                              PLATE, Ring Retaining
SCREW, #10-24x1/2 Self-Tapping Machine (5)
 27
            3-1013
 28
            9-0913
            1-2125
                        GUIDE, Thrust Plate
WASHER, 3/8 Internal Tooth Lock (2)
 29
 30
            9-0390
 31
            9-0122
                        WASHER, 3/8 Flat (3)
                        NUT, 3/8-24 Hex (2)
JOINT, Ball
 32
            9-0155
 33
            1-5753
 34
            9-0095
                        NUT, 1/4-28 Hex
                        WASHER, 1/4 Flat
WASHER, 1/4 Internal Tooth Lock
ASSEMBLY, Drive-Disc
 35
            9-0055
 36
            9-0053
 37
               *
 38
                        BUSHING
            1-7326
                        SPRING (Wheel Drive & Idler) (2)
 39
                        ARM, Idler
RETAINER, 3/8 Bolt
 40
            3-2116
 41
            1-3847
                        BOLT, 1/4-20x1-1/4" Carriage
 42
            9-0078
                        NUT, 1/4-20 Hex Center Lock
            9-0372
 43
                        ASSEMBLY, Deck Bracket (Includes items 44 thru 46)
BRACKET, Deck
            5-0751
 44
            3-1919
                              BUSHING, Flange (2)
 45
            1-2306
 46
            2-1758
                              SPACER
                        SCREW, 5/16-18x1/2" Hex Head Cap WASHER, 5/16 Internal Tooth Lock
 47
            9-0534
            9-0391
 48
                        WASHER, Spring
 49
            1-1079
                        COTTER-PIN, 3/32x1/2"
 50
            9-0555
                        SCREW, 1/4-20x1/2" Self-Tapping
BRACKET, Strap
 51
            9-0539
 52
            3-7732
 53
            9-0731
                        BOLT, 5/16-18x5/8" Short Neck Carriage (2)
                        NUT, 5/16-18 Hex Flange Lock (2)
 54
            9-0585
 55
            1-2122
                        SPRING, Clutch
                         SHIELD, Hex Shaft (European Only)
 56
            3-2664
                        SCRAPPER, Drive Pulley
            1-6380
```

^{*} NOTE: Order Kit #6-0710 for replacement.


TRANSMISSION (DIFFERENTIAL)

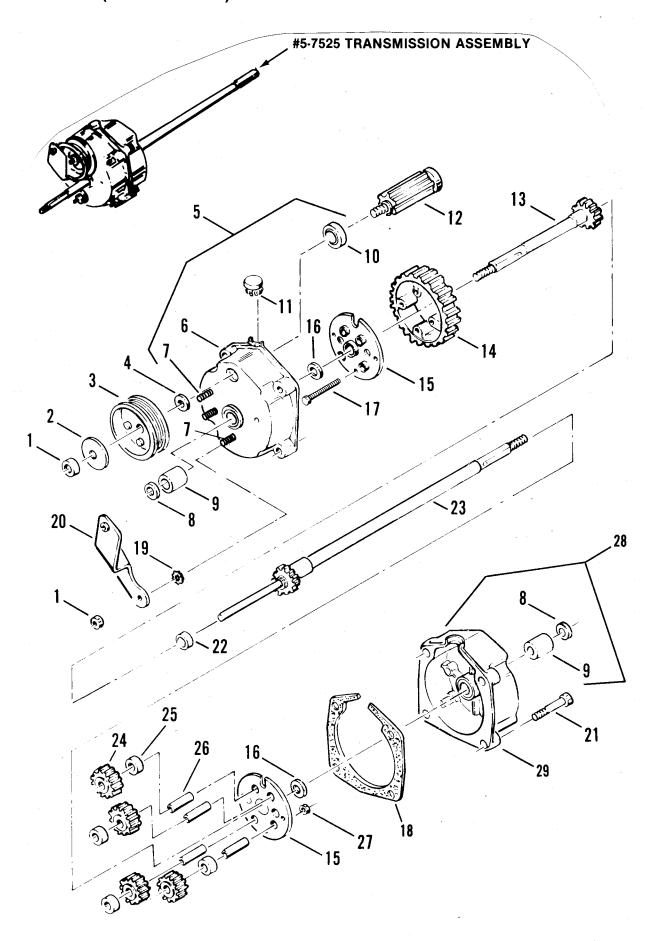

ı	TEM	PART NO.	DESCRIPTION
	-	5-7525	ASSEMBLY, Transmission (Includes items 1 thru 29)
	1	~ 1-1201	NUT, 5/16-24 Hex Lock (3)
	2	1-1132	WASHER, Spring
	3	1-9213	PULLEY, Poly-Vee Belt
	4	1-1724	WASHER, Spring
	5	5-9794	HOUSING ASSEMBLY, Right (Includes items 6,7,8,9,10)
	6	1-7080	HOUSING, Right Side
	7	1-4155	SCREW, 5/16-24x1-1/8" Rib Neck
	8	1-2314	SEAL, 5/8" ID (2)
	9	1-2507	BEARING, Differential (2)
	10	1-1767	BEARING, Ball
	11	1-1133	PLUG, Housing
	12	5-0767	GEAR, Input
	13	5-0830	AXLE, Short
	14	1-2495	GEAR, Differential, 46 Tooth
	15	3-1970	PLATE (2)
	16	3-1965	WASHER, Thrust (2)
	17	9-0557	SCREW, 10-32x1-1/2" Hex Head Cap (4)
	18	1-1774	GASKET, Housing
	19	9-0189	WASHER, 5/16" Internal External Tooth Lock
	20	5-1903	BRACKET, Differential
	21	9-0911	SCREW, 1/4-20x1-1/4 " Self-Tapping (4)
	22	1-2543	SPACER, Axle Gear
	23	5-0831	AXLE, Long
	24	2-1115	GEAR, Pinion, 12 Tooth (4)
	25	1-2500	SPACER, Pinion Gear (4)
	26	1-1110	SHAFT, Pinion (4)
	27	9-0376	NUT, 10-32 Hex Lock (4)
	28	5-7523	HOUSING ASSEMBLY, Left (Includes items 8,9,29)
	29	1-7015	HOUSING, Left Side


NOTE: 6-0337 KIT, Transmission Gear (includes items 14 thru 17 & 22 & 24 thru 27)

REAR WHEELS, BRACKETS, LATCHES

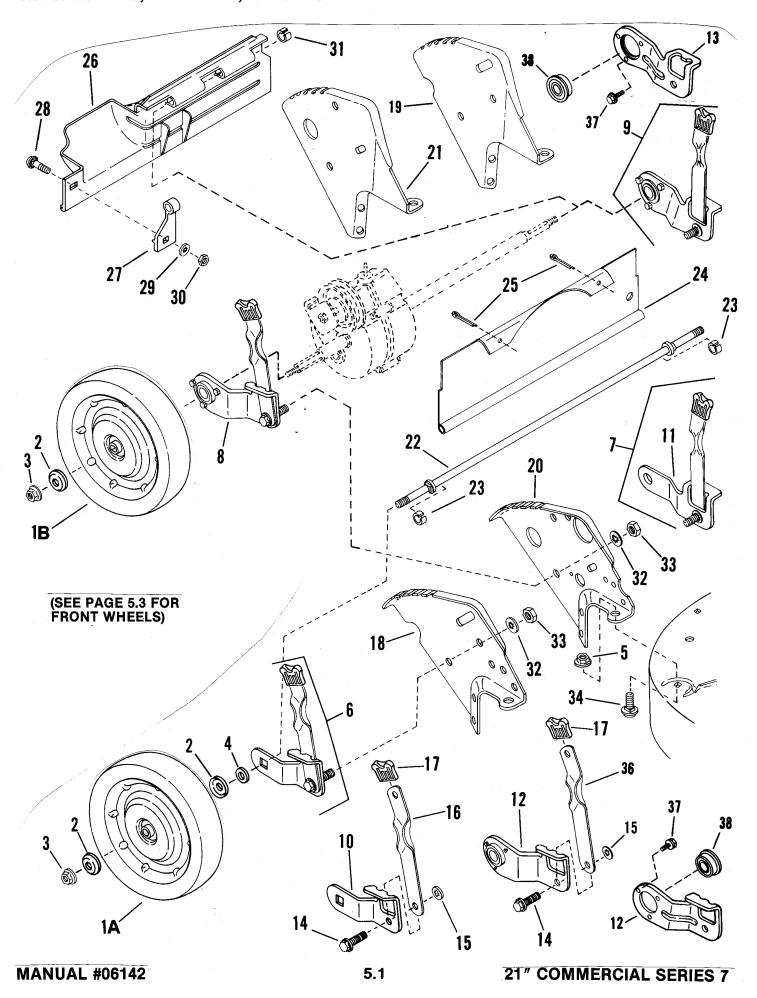


ITEM	PART NO.	DESCRIPTION
1A	1-9200	WHEEL, 9x2.00 Steel Rim (Push Models) ('90 Models)
	1-7729	WHEEL, 9x2.00 Steel Rim (Push Models) ('91 Models & Later)
1B	1-9201	WHEEL, 9x2.00 Steel Rim (Self Propelled) ('90 Models)
	1-7695	WHEEL, 9x2.00 Steel Rim (Self propelled) ('91 Models & Later)
2	3-1121	HUB-CAP (4)
3	9-0394	NUT, 7/16-20 Hex Center Lock
4	3-1961	WASHER, Steel (2)
5	9-0585	NUT, 5/16-18 Hex Flang Lock
6	5-1885	WHEEL ARM ASSEMBLY (Front Left & Rear Right)
		Square opening-Includes items 10,14,15,16,17
. 7	5-1886	WHEEL ARM ASSEMBLY (Front Right & Rear Left)
		Round opening-Includes items 11,14,,15,16,17
8	5-1814	WHEEL ARM ASSEMBLY (Rear Right "P" Models) Includes items
	<u> </u>	12,14,15,16,17,36,37,38
, 9	5-1815	WHEEL ARM ASSEMBLY (Rear Left "P" Models) includes items 13,14,15,16,17,36,37,38
10	3-1016	ARM (Square Axle End)
11	3-1017	ARM (Round Axle End)
12	3-2722	ARM, Wheel, Rear Right "P" Models
13	3-2723	ARM, Wheel, Rear Left "P" Models
14	1-5761	BOLT, 5/16-18x1 Shoulder
15	1-1791	RETAINER, 5/16 Bolt
16	1-2325	LATCH, Height Adjusting
17	2-7702	GRIP, Latch
18	3-6050	BRACKET, Right Rear Wheel (Push Models)
19	3-6049	BRACKET, Left Rear Wheel (Push Models)
20	3-6048	BRACKET, Right Rear Wheel (Self-prop. "P" Models)
21	3-6242	BRACKET, Left Rear Wheel (Self-prop. "P" Models)
22	2-1119	AXLE, (Rear on Push Models also front on all)
23	1-1780	RING (2) (Push Models)
24	3-7765	GUARD, Rear Foot (Push Models)
25	9-0297	COTTER PIN, 1/8x1-1/2 (2)
26	1-9522	GUARD, Rear Foot (Self-prop. "P" Models)
27	1-2616	SUPPORT, Foot Guard
28	9-0005	BOLT, 1/4-20x1/2 Short Neck Carriage Gr.5
29	9-1023	WASHER, 1/4 Int. Tooth Lock
30	9-0063	NUT, 1/4-20 Hex
31	2-3791	RING
32	9-0391	WASHER, 5/16 Int. Tooth Lock
33	9-0196	NUT, 5/16-18 Hex
34 35	9-0731	BOLT, 5/16-18x1/2 Short Neck Carriage
35 36	3-1960 1-9218	HUB-CAP, Deep Dish (4)
37	9-1012	LATCH, Height Adjusting (Self-Propelled Models) SCREW, #10-32x3/8 Self-Tapping (3)
37 38	1-8767	BEARING
30	1-0707	DEARING


FRONT WHEELS, BRACKET, LATCHES

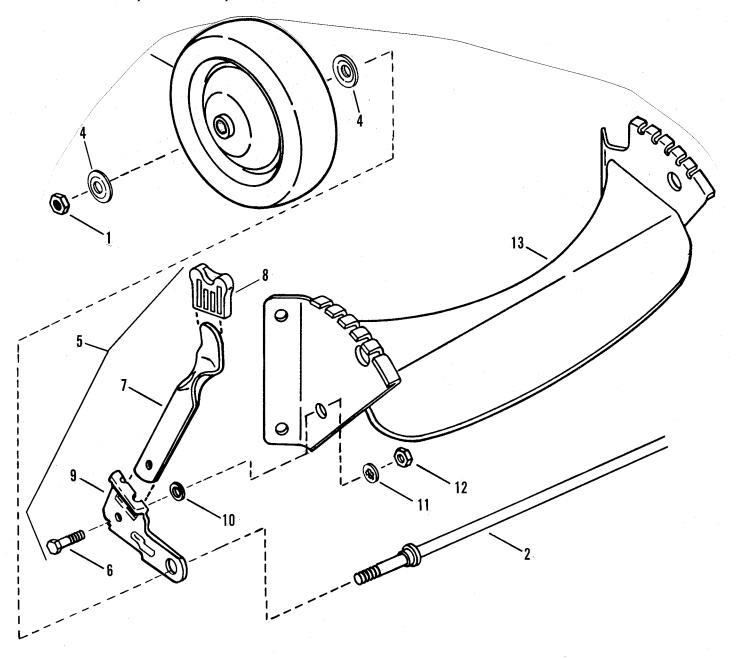

ITEM	PART NO.	DESCRIPTION	
1	9-0377	NUT, 7/16-20 Hex Centerlock	
2	2-1119	AXLÉ	
3	1-9199	WHEEL, Front, 7x1.75 Steel Rim (2)	
•	1-7694	WHEEL, Front 7x1.75 (Steel Rim) (2) ('91 ModHIs & L	ater)
4	3-1121	HUB-CAP	
5A	5-1885	ARM ASSEMBLY, Left Wheel (Consists of Items 8,9	A 10 11 10\
		ARM ASSEMBLY, Right Wheel (Consists of Items 8	9B 10 11B 12
5B	5-1886	ARM ASSEMBLY, Right Wheel (Consists of Items 8,	9B,10,11B,12)
	5-1886 1-5761	ARM ASSEMBLY, Right Wheel (Consists of Items 8, BOLT, 5/16-18 Shoulder	9B,10,11B,12)
5B	5-1886 1-5761 1-2325	ARM ASSEMBLY, Right Wheel (Consists of Items 8, BOLT, 5/16-18 Shoulder LATCH, Height	9B,10,11B,12)
5B 6 7 8	5-1886 1-5761 1-2325 2-7702	ARM ASSEMBLY, Right Wheel (Consists of Items 8, BOLT, 5/16-18 Shoulder LATCH, Helght GRIP	9B,10,11B,12)
5B 6 7 8 9A	5-1886 1-5761 1-2325 2-7702 3-1016	ARM ASSEMBLY, Right Wheel (Consists of Items 8, BOLT, 5/16-18 Shoulder LATCH, Height GRIP ARM, Left Wheel	9B,10,11B,12)
5B 6 7 8 9A 9B	5-1886 1-5761 1-2325 2-7702 3-1016 3-1017	ARM ASSEMBLY, Right Wheel (Consists of Items 8, BOLT, 5/16-18 Shoulder LATCH, Height GRIP ARM, Left Wheel ARM, Right Wheel	9B,10,11B,12)
5B 6 7 8 9A 9B 10	5-1886 1-5761 1-2325 2-7702 3-1016 3-1017 1-1791	ARM ASSEMBLY, Right Wheel (Consists of Items 8, BOLT, 5/16-18 Shoulder LATCH, Height GRIP ARM, Left Wheel ARM, Right Wheel RETAINER, 5/16 Bolt	9B,10,11B,12)
5B 6 7 8 9A 9B	5-1886 1-5761 1-2325 2-7702 3-1016 3-1017	ARM ASSEMBLY, Right Wheel (Consists of Items 8, BOLT, 5/16-18 Shoulder LATCH, Height GRIP ARM, Left Wheel ARM, Right Wheel	9B,10,11B,12)

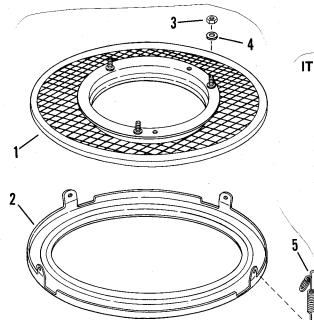


ITEM	PART NO.	DESCRIPTION
	6-0440	KIT, Snapperizer (Includes items 1 thru 5)
1	5-1243	SCREEN, Fastener Assembly
2	3-9759	RING, Bottom
3	9-0223	NUT, 5/16-24 Hex (3)
4	9-0187	WASHER, 5/16 Split Lock (3)
5	1-2587	SPRING (3)

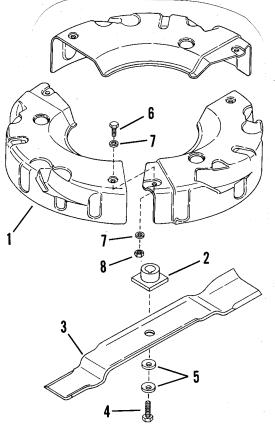


MULCHERIZER

ITEM	PART NO.	DESCRIPTION
- .	6-0842	KIT, Mulcherizer (Includes items marked with *)
-	6-0420	KIT, Mulcherizer (Includes items 1 thru 8)
1*	1-9814	LINER (3)
2	1-3870	HUB (7/8" I.D.)
_*	1-5936	HUB (25mm I.D.)
3*	1-9521	BLADE, Mulcherizer
4*	9-0483	SCREW, 3/8-24x1 3/4" Hex Head Cap (Gr.5)
5*	1-2063	WASHER, Cone (2)
6*	9-0100	SCREW, 1/4-28x5/8" Hex Head Cap (Gr.5)(3)
7*	9-0055	WASHER, 1/4 Flat (6)
. 8*	9-0303	NUT, 1/4-28 Hex Lock (3)

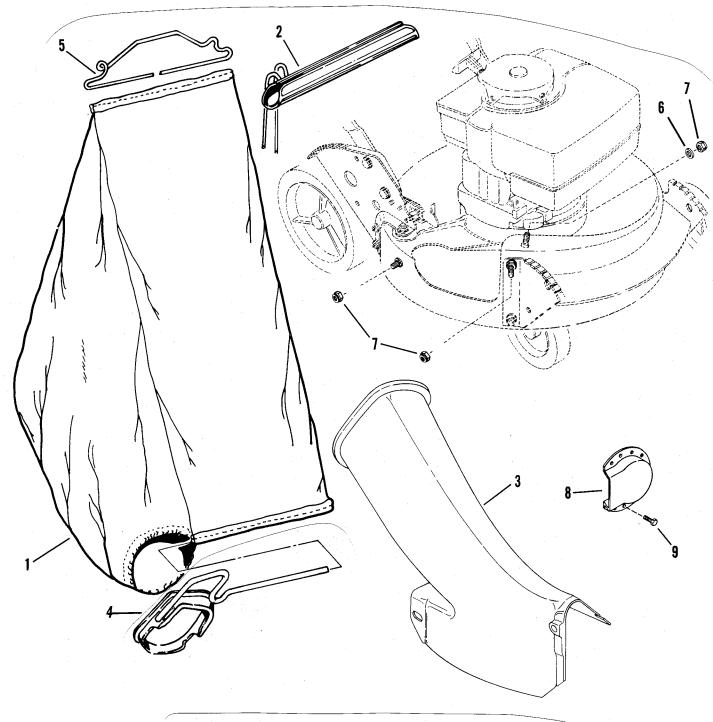

ITEM	PART NO.	DESCRIPTION
_	6-0936	KIT, Grass Catcher (Includes items 1 & 2)
1	2-3774	BAG, Grass (COMMERCIAL ONLY)
2	5-0711	ASSEMBLY, Rope & Slider
3	1-6050	ADAPTER, Bag
4	4-7969	CONNECTOR, Bag
5 .	1-9247	WIRE, Bag Connector
6	9-0188	WASHER, 5/16 Flat
7	9-0951	NUT, 5/16-18 Hex Flange Lock (3)
8	2-3031	DEFLECTOR, Muffler (Briggs)
9	2-3023	SCREW, #8-18x3/8" Hex Head Cap (3)
- -	1-6268	BAG. Polyethylene (NOT SHOWN)

ACCESSORY

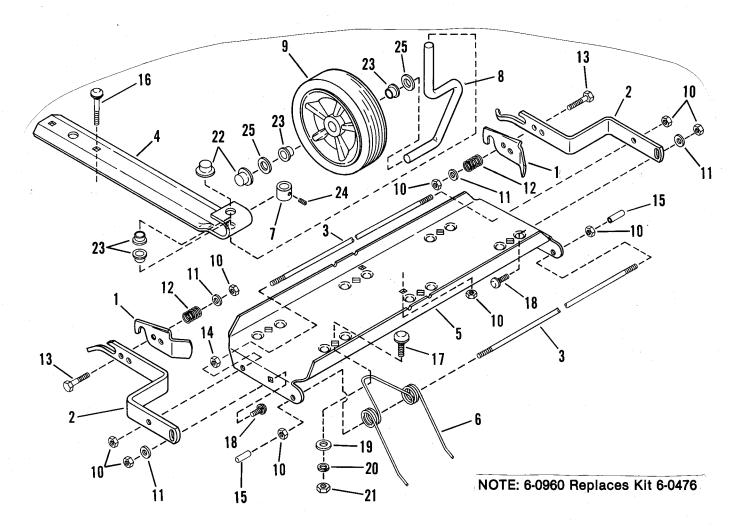

ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
-	6-0960	KIT, Thatcherizer (Includes 1 thru 2	7)		
1	3-2891	LATCH, Frame Attachment (2)	14*	9-0063	NUT, 1/4-20 Hex (2)
2A	3-2892	BAR, Mount (Right Hand)	15**	1-4111	CAP, Vinyl (2)
2B	3-2893	BAR Mount (Left Hand)	16*	9-0015	BOLT, 1/4-20x1-3/4 Carriage (2)
3	1-8499	ROD, Tine (2)	17*	9-0383	BOLT, 5/16-18x1 Carriage (6)
4	1-8700	SUPPORT, Wheel	18*	9-0074	BOLT, 1/4-20x3/4 Carriage (2)
5	1-9948	TRAY, Tine	19*	1-4098	WASHER, Reinforcing (6)
6***	1-8496	SPRING, Tine Thatching (6)	20*	9-0187	LOCKWASHER, 5/16 (6)
7**	1-4100	BUSHING, Wheel Adj.	21*	9-0196	NUT, 5/16-18 Hex (6)
8	1-8493	AXLE, Wheel	22**	1-4101	PUSH NUT, 1/2 (2)
9	1-8189	WHEEL, Gage 7x1.50	23**	1-4342	BEARING, Nyliner (4)
10*	9-0761	LOCKNUT, 1/4-20 Hex (10)	24**	1-4103	SETSCREW, 5/16x1/4
11*	9-0598	WASHER, 1/4 SAE (4)	25*	9-0250	WASHER, 1/2 (2)
12**	1-4114	SPRING, Compression (2)	26	1-4115	DECAL, Adjustment (Not Shown)
13*	9-0825	BOLT, 1/4-20x1-1/4 Hex (2)	27	1-4062	DECAL, Thatcherizer (Not Shown)
				6-0965	KIT, Adapter (Includes Items 1,2 &
					10 thru13)

^{*}Part of Hardware Bag #6-0554


^{**}Part of Hardware Bag #6-0555

^{***}Part of Hardware Bag #6-0574 (6 spring in bag)

ENG. H.P.	START TYPE	SNAPPER#	ENG. MFGR.	MFGR. MODEL	MFGR. TYPE
5	ROPE	17906	BRIGGS	104772	3112-01
4	ROPE	17888	ROBIN	WI-125V	600005
5	ROPE	17907	BRIGGS	132922	3132-01
5	ROPE	17889	ROBIN	WI-185V	800926

NOTE: PURCHASE ENGINE PARTS FROM ENGINE MANUFACTURER'S DEALER.

				HARDWARE BAG	as					
MOWER MODEL DESIGNATION	APPLICABLE HARDWARE BAG		60939				60938			
	60939	60938	-	CONSISTS OF:				CONSISTS	OF:	
				-		QTY		*	C	ΥΤΩ
C21507B PC21507B PC21507BV	*			CLIP CAPSCREW, 1/4-28x CAPSCREW, 1/4-28x			9-0111	ROD CLIP CAPSCREW,		
C21507R C21407R-2 PC21407R-2	*		9-0095 9-0548 2-3793	HEX NUT, 1/4-28 CAPSCREW, 1/4-20x T-NUT, 1/4-20 Curve	(1 <i>"</i> d	3 4 4	9-0095 9-0548 2-3793	CAPSCREW, HEX NUT, 1/4- CAPSCREW, T-NUT, 1/4-20	28 1/4-20x1" Curve Head	3 4
PC21507R				LOCK WASHER, 1/4 LOCK NUT, 5/16-18	. "	7	9-0951	LOCK WASHE LOCK NUT, 5/ WASHER, #10	16-18	7 3 2

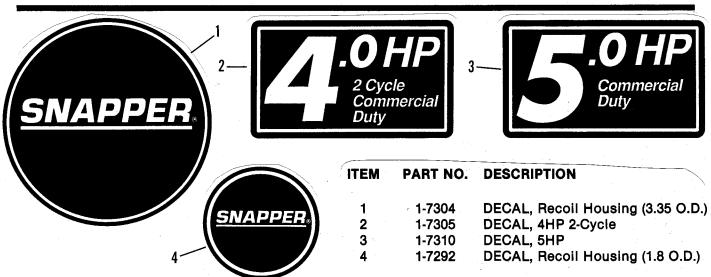

IT IS THE POLICY OF SNAPPER POWER EQUIPMENT TO IMPROVE ITS PRODUCTS WHENEVER IT IS POSSIBLE AND PRACTICAL TO DO SO. WE RESERVE THE RIGHT TO MAKE CHANGES OR ADD IMPROVEMENTS AT ANY TIME WITHOUT INCURRING ANY OBLIGATION TO MAKE SUCH CHANGES ON PRODUCTS MANUFACTURED PREVIOUSLY.

SNAPPER POWER EQUIPMENT

McDonough GA • 30253